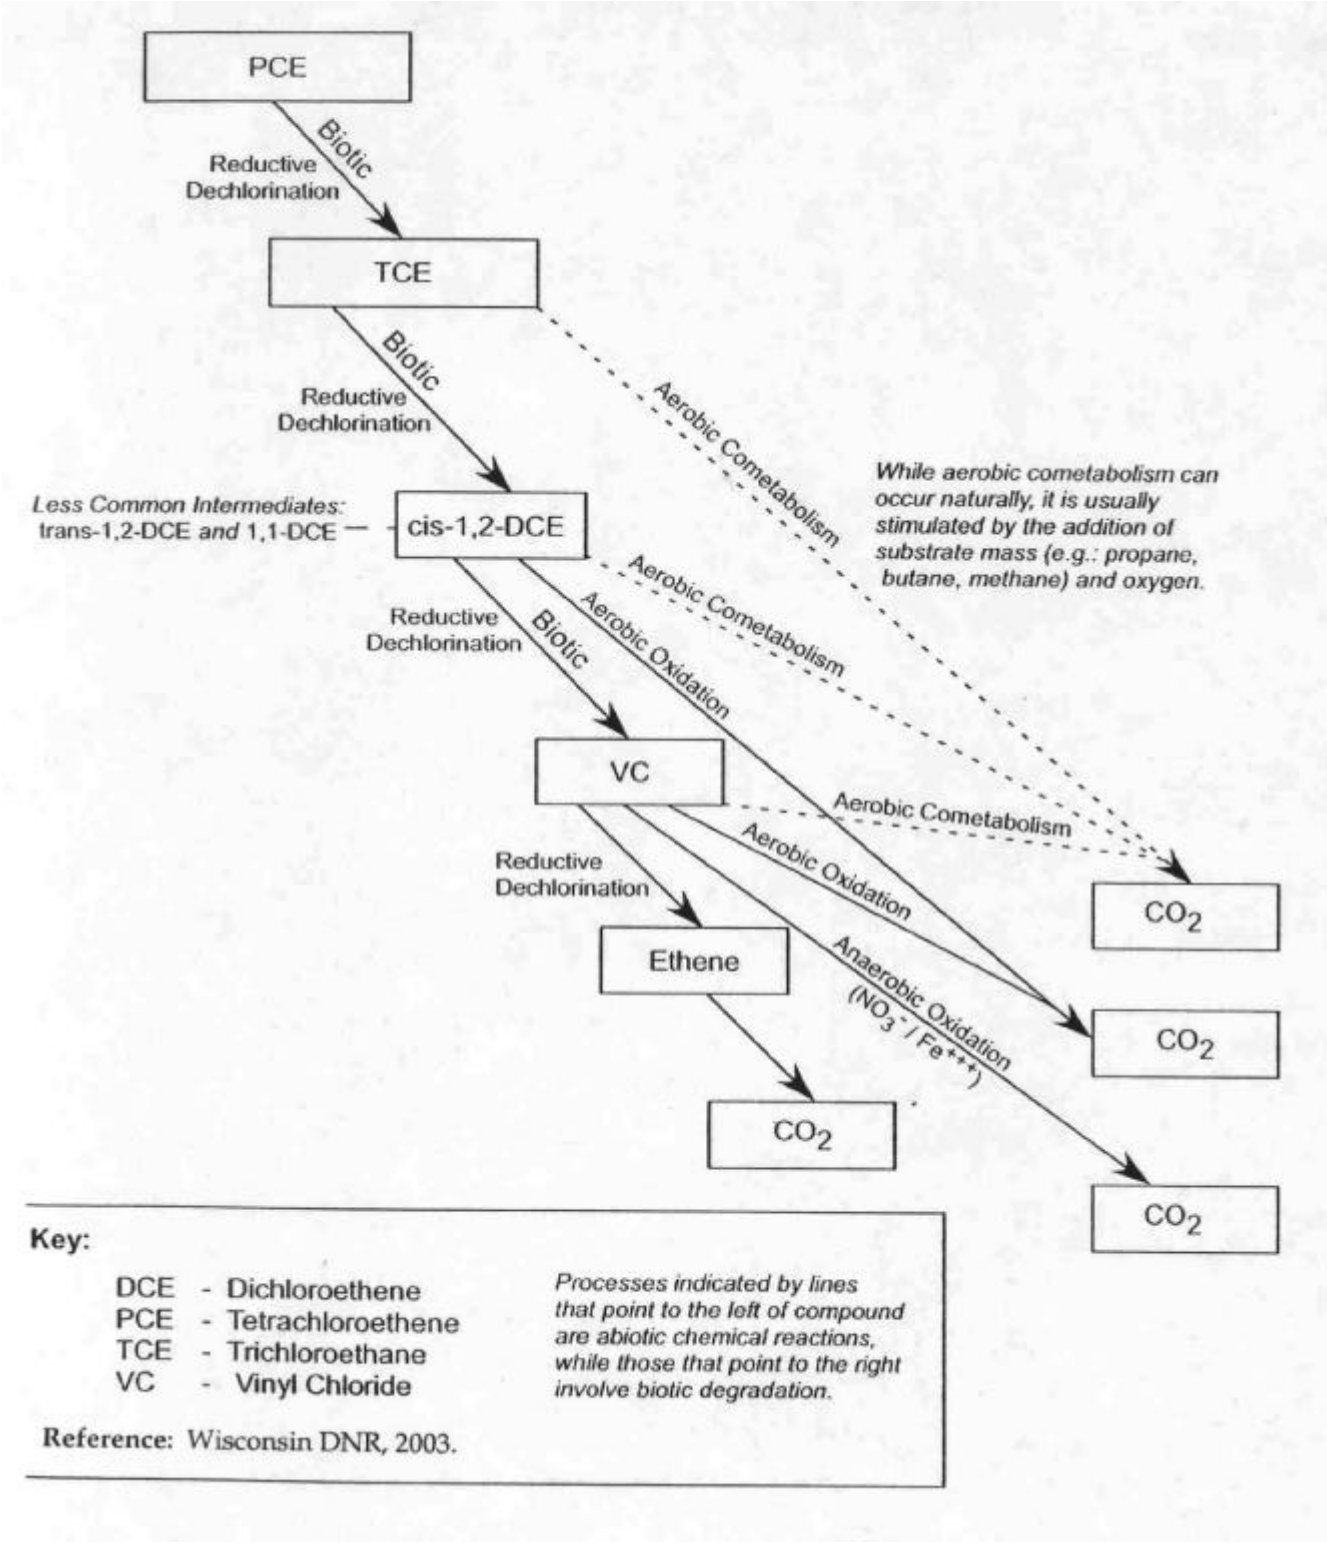

figure 7.1

PCE AND TCE
BIODEGRADATION PROCESS
North Oaks, Minnesota